



# RSD-S-PLC Quick Installation Guide

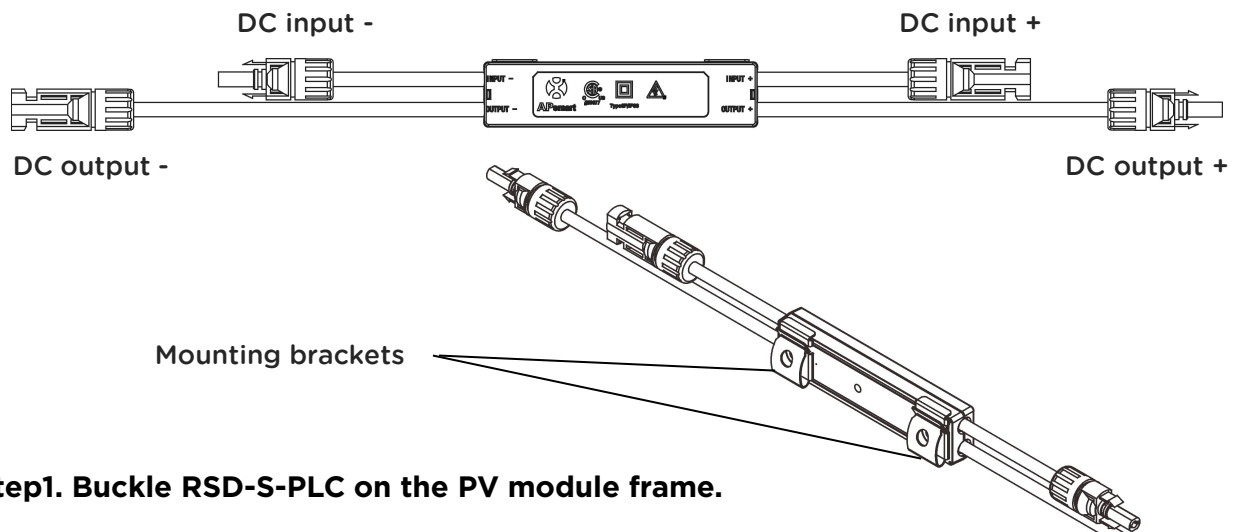


**Step1. Buckle RSD-S-PLC on the PV module frame.**

## A. Front buckle

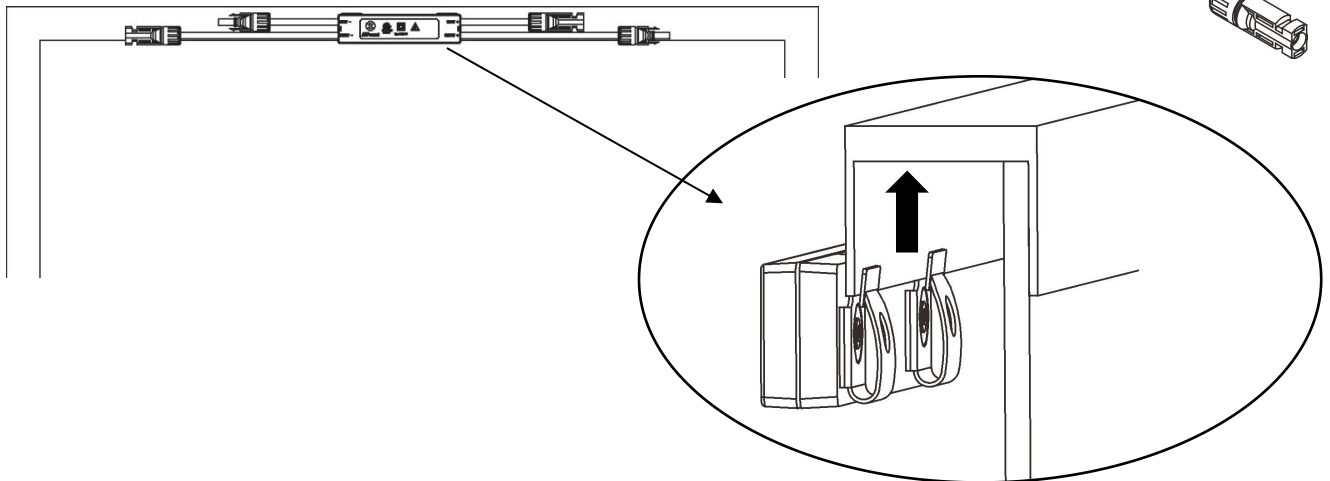

## B. Back buckle

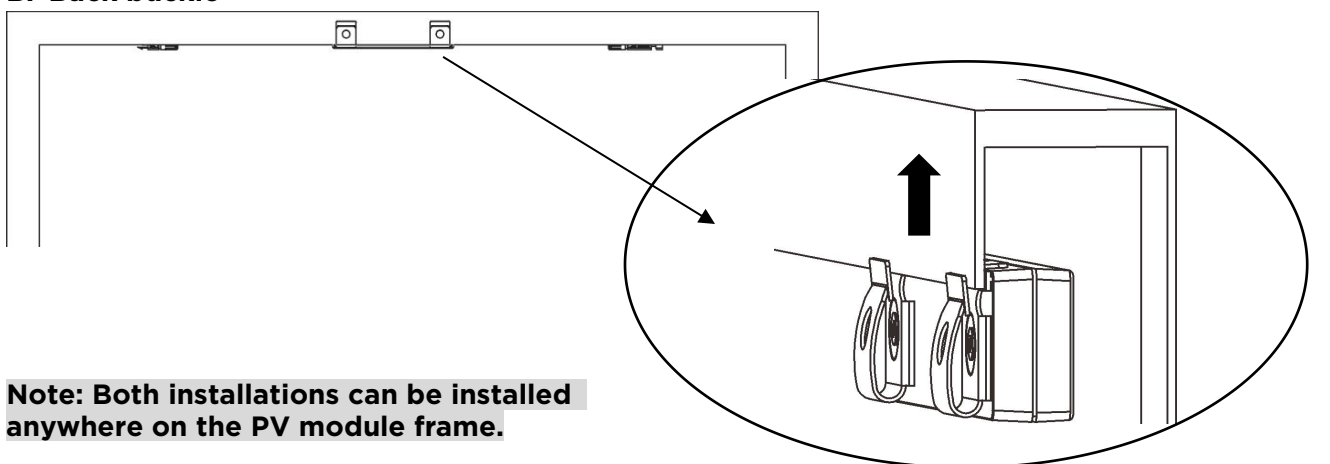

**Note: Both installations can be installed anywhere on the PV module frame.**

**Step 2. Connect the input port of the RSD-S-PLC to the junction box, and connect the output ports of two adjacent RSD-S-PLCs to the inverter.**

**APsystems**

600 Ericksen Ave NE, Suite 200 Seattle, WA 98110  
844-666-7035 | APsystems.com