

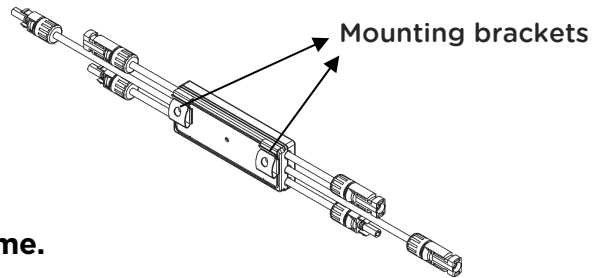


# RSD-D Quick Installation Guide

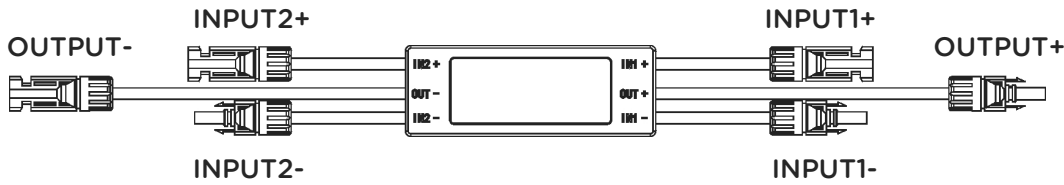


**Step 1. Buckle RSD-D onto the PV module frame.**


**A. Back buckle**

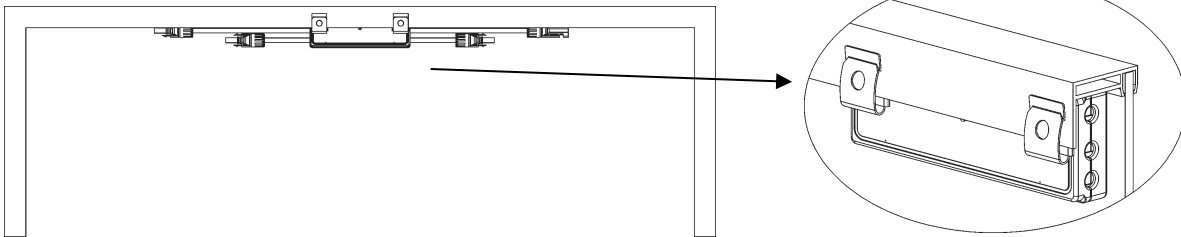

**B. Front buckle**

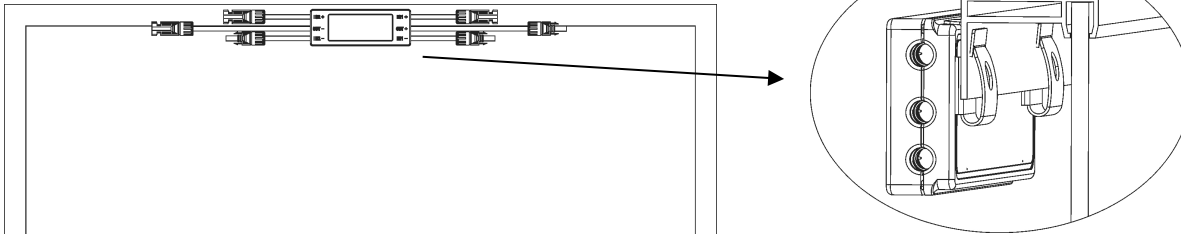

**Step 2. Connect the input 1 port of the RSD-D to the PV module junction box, and connect the input 2 port of RSD-D to the other PV module junction box. Connect the output ports of two adjacent RSD-Ds in series and then connect to the inverter.**

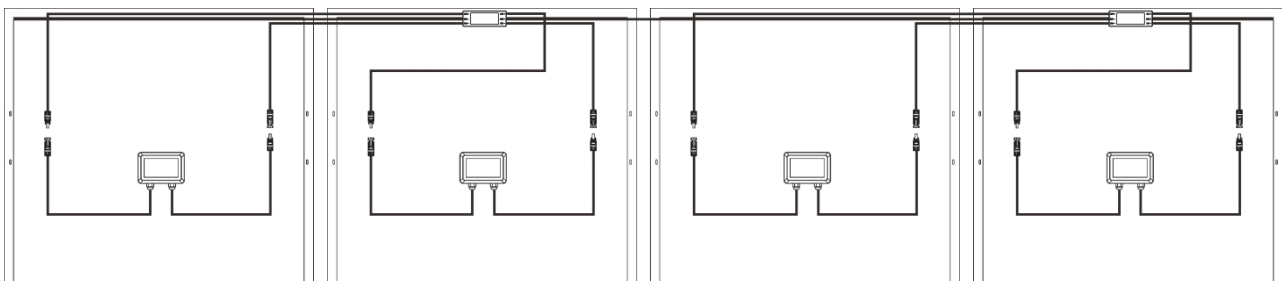

**WARNING: When connecting the RSD-D to only one PV module, use INPUT1 port ONLY, then connect a DC extension cable to both terminals of INPUT2 to short the unused side, otherwise the RSD-D may be damaged.**

**WARNING: Do not short-circuit the RSD ( RSD string ) output cable.**

